 


Spare parts of roller burnishing tools series TH and TB from Ø6 to Ø49

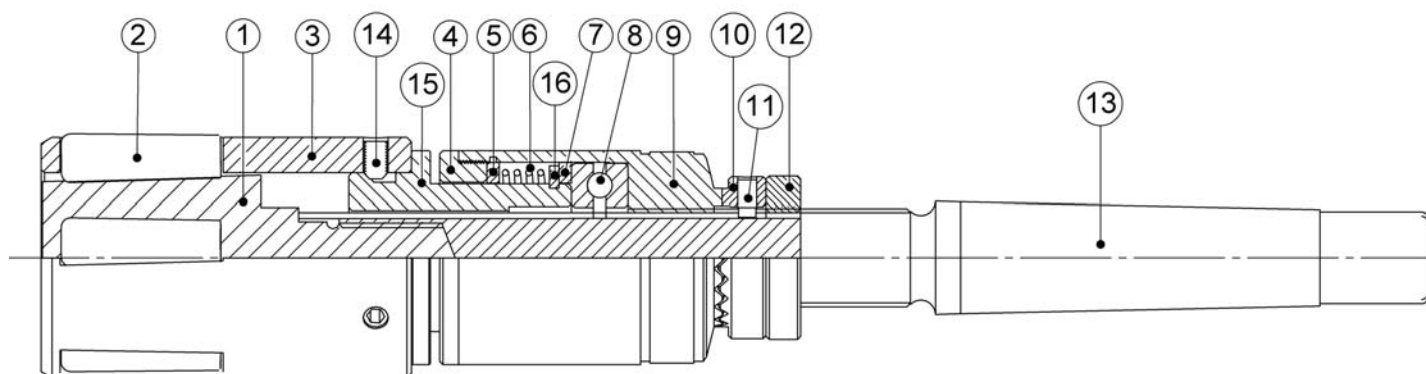


Spare parts for roller burnishing tools series TH and TB from Ø6 mm to Ø49 mm

No.	Description	Code
1	Cone	Look at the catalogue
2	Rollers	Look at the catalogue
3	Cage	Look at the catalogue
4	Housing Nut	YDX1001
5	Thrust Ring	YDX0901
6	Spring (from Ø6 to Ø14)	YDX0701T
6	Spring (from Ø15 to Ø49)	YDX0701
7	Thrust Ring	YDX0901
8	Ball Bearing	YDX0601
9	Housing	YDX0501
10	Adjustment Gear	YDX0301
11	Pin	YDX0401
12	Adjustment Nut Lock	YDX0101
13	Shank	Look at the catalogue
14	Screw (only between Ø22 - 49 mm)	YDX1101
15	Sleeve (only between Ø22 - 49 mm)	Look at the catalogue
16	Locking Ring (only between Ø32 - 49 mm)	YDX1201
20	Lock Spring	YDX0201

The tool body is supplied complete with parts No. 4, 8, 9, 10, 12, 13, 20 (look at the catalogue for the code)

Spare rollers

 
Rollers' size

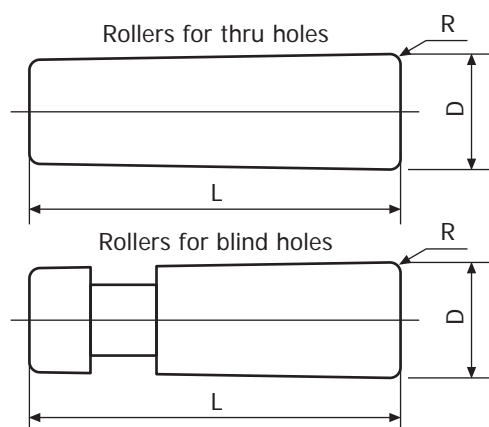

Code	Thru hole Plain shaft		
	ØD	L	R
500100	1,82	7,90	1,00
500108	2,60	9,52	1,00
500102	3,75	15,80	1,50
500111	4,60	22,22	1,50
500112	5,50	25,40	1,50
500113	6,70	28,60	2,00
500109	7,85	25,40	2,50
500107	13,50	38,10	4,00

Code	Blind hole Stepped shaft		
	ØD	L	R
500308	1,82	7,90	0,75
500300	2,60	9,52	0,75
500301	3,75	15,80	1,00
500310	4,60	15,80	1,00
500311	5,50	17,46	1,00
500312	6,70	19,05	1,50
500307	7,85	25,40	1,50
500306	13,50	38,10	2,00

 Spare parts of roller burnishing tools series TH and TB from Ø50 to Ø80

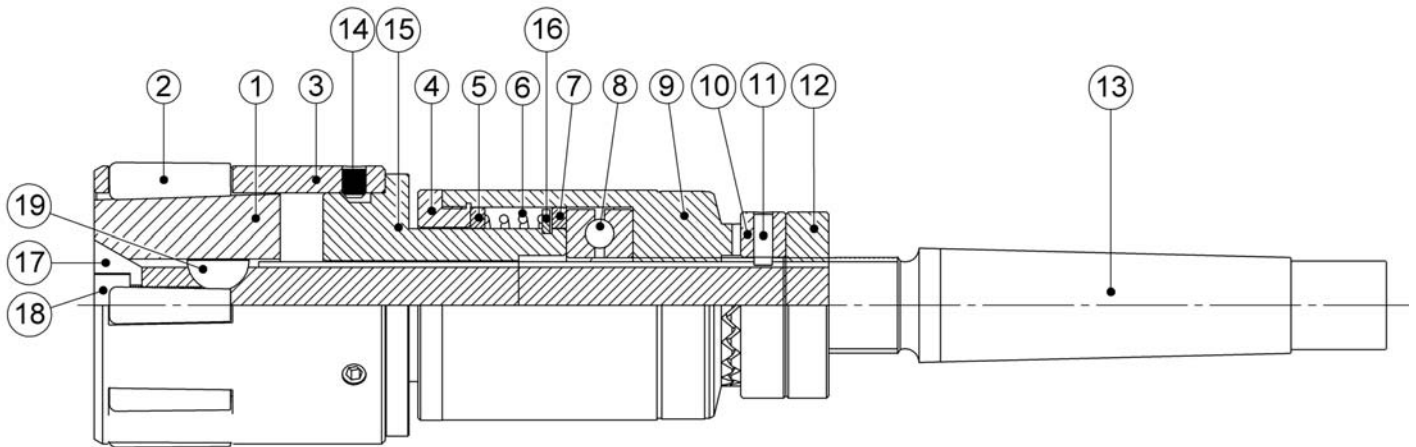


Spare parts for roller burnishing tools series TH and TB from Ø50 mm to Ø80 mm

No.	Description	Code
1	Cone	Look at the catalogue
2	Rollers	Look at the catalogue
3	Cage	Look at the catalogue
4	Housing Nut	YDX1002
5	Thrust Ring	YDX0902
6	Spring	YDX0702
7	Thrust Ring	YDX0902
8	Ball Bearing	YDX0602
9	Housing	YDX0502
10	Adjustment Gear	YDX0302
11	Pin	YDX0402
12	Adjustment Nut Lock	YDX0102
13	Shank	Look at the catalogue
14	Screw	YDX1102
15	Sleeve	Look at the catalogue
16	Locking Ring	YDX1202
17	Conical Ring	YDX1401
18	Screw	YDX1501
19	Wedge	YDX1301
20	Lock Spring	YDX0202

The tool body is supplied complete with parts No. 4, 8, 9, 10, 12, 13, 20 (look at the catalogue for the code)

 Spare parts of roller burnishing tools series TH and TB from Ø81 to Ø160

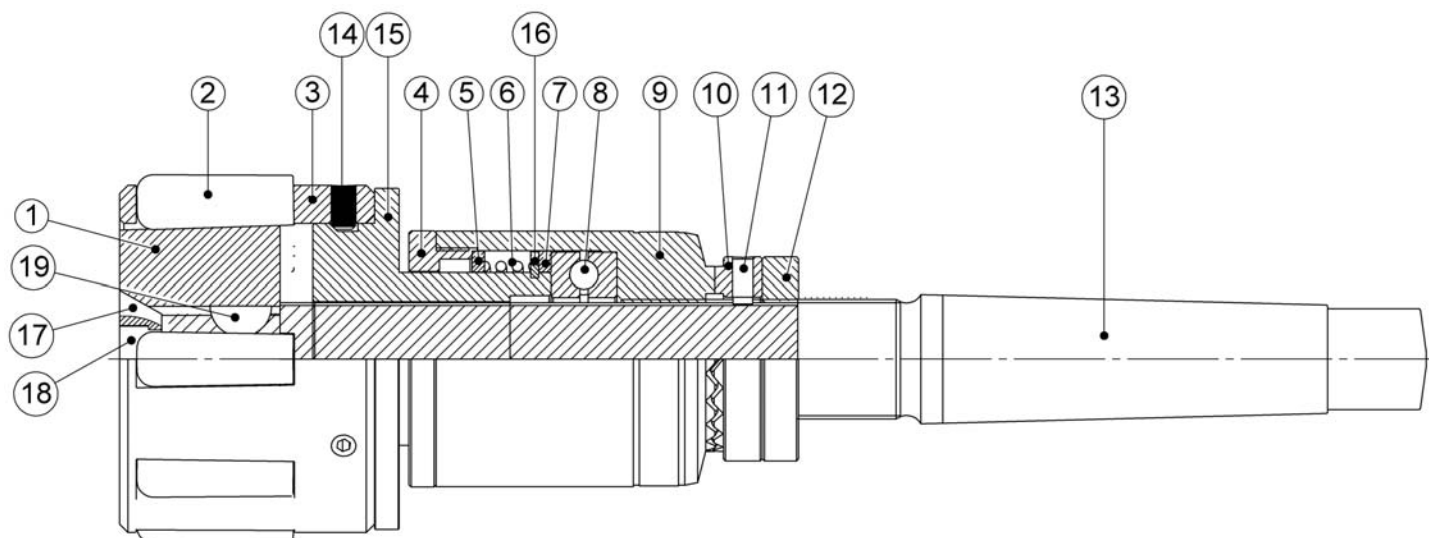


Spare parts for roller burnishing tools series TH and TB from Ø81 mm to Ø160 mm

No.	Description	Code
1	Cone	Look at the catalogue
2	Rollers	Look at the catalogue
3	Cage	Look at the catalogue
4	Housing Nut	YDX1003
5	Thrust Ring	YDX0903
6	Spring	YDX0703
7	Thrust Ring	YDX0903
8	Ball Bearing	YDX0603
9	Housing	YDX0503
10	Adjustment Gear	YDX0303
11	Pin	YDX0403
12	Adjustment Nut Lock	YDX0103
13	Shank	Look at the catalogue
14	Screw	YDX1103
15	Sleeve	Look at the catalogue
16	Locking Ring	YDX1203
17	Conical Ring	YDX1402
18	Screw	YDX1502
19	Wedge	YDX1302
20	Lock Spring	YDX0203

The tool body is supplied complete with parts No. 4, 8, 9, 10, 12, 13, 20 (look at the catalogue for the code)

 Spare parts of roller burnishing tools series TH and TB from Ø161 to Ø350

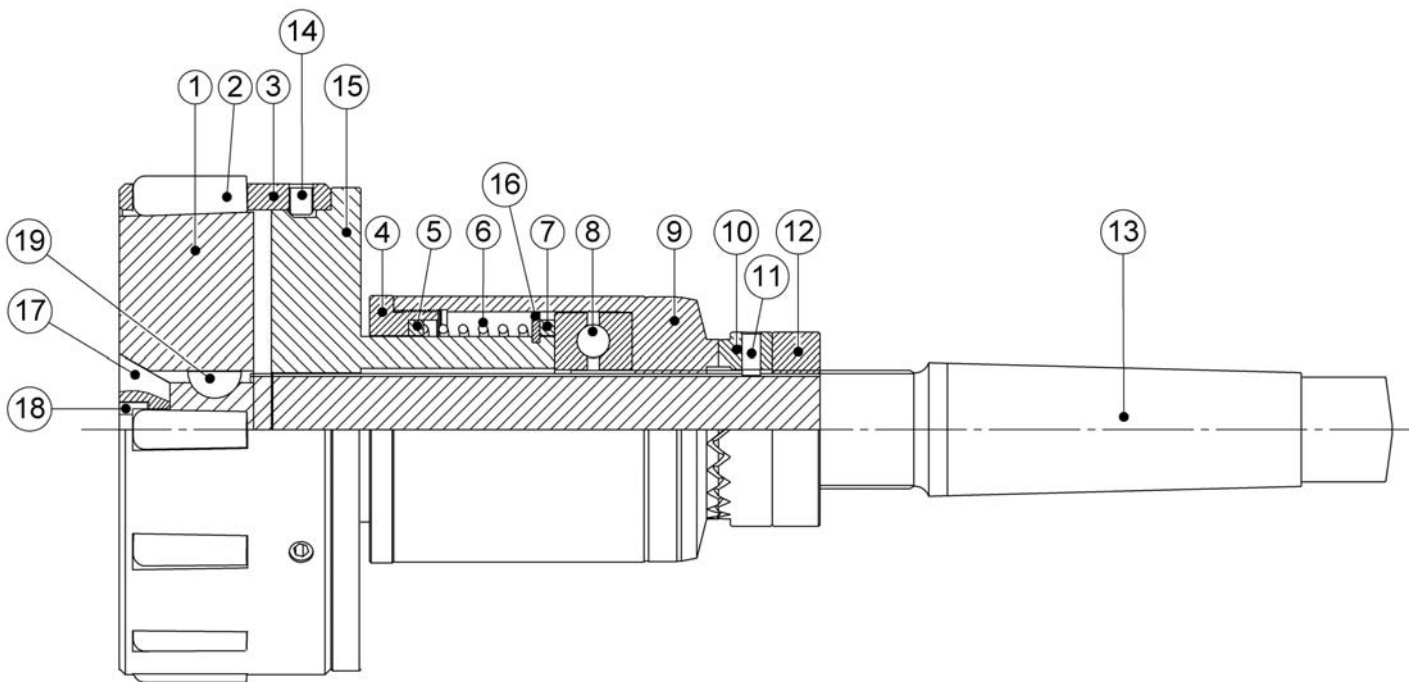

Spare parts for roller burnishing tools series TH and TB from Ø161 mm to Ø350 mm

No.	Description	Code
1	Cone	Look at the catalogue
2	Rollers	Look at the catalogue
3	Cage	Look at the catalogue
4	Housing Nut	YDX1004
5	Thrust Ring	YDX0904
6	Spring	YDX0704
7	Thrust Ring	YDX0904
8	Ball Bearing	YDX0604
9	Housing	YDX0504
10	Adjustment Gear	YDX0304
11	Pin	YDX0404
12	Adjustment Nut Lock	YDX0104
13	Shank	Look at the catalogue
14	Screw	YDX1104
15	Sleeve	Look at the catalogue
16	Locking Ring	YDX1204
17	Conical Ring	YDX1403
18	Screw	YDX1503
19	Wedge	YDX1303
20	Lock Spring	YDX0204

The tool body is supplied complete with parts No. 4, 8, 9, 10, 12, 13, 20 (look at the catalogue for the code)